

WARNING!



Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDs are included in your lamp. Never touch the LED surface with your bare hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Conical
Family: Floor Lamps
Description: Conical Accord Floor Lamp 3004 / 3062.

 
Materials: natural wood veneer, MDF.

ASSEMBLING THE FIXTURE

Read carefully all the assembling instructions below before starting the installation process.

- 1 Remove the protecting package from the pieces taking care to not harm any parts with cutting surfaces or objects. Lay the parts of the fixture on some horizontal surface in order to connect them, if needed use the protecting package to soften the surface and protect the parts from getting scratched or harmed.
- 2 Remove the screws, rising and turning the socket's support (S).
- 3 Fit the socket's support aligning it with the holes on top of the superior base, next, fasten the provided screws (S1) until the socket's support is tight on the base.
- 4 With the socket's support fixed on the base of the fixture, remove the socket's ring.
- 5 Fit the metallic structure of the shade on the socket, fastening the socket's ring in the place again to finish the installation of the shade.
- 6 Install an UL listed E-26 LED bulb respecting the limit of 25W.
- 7 Plug the luminaire to an appropriate outlet and use the floor switch to turn the fixture ON/OFF.

Your fixture is ready to use.

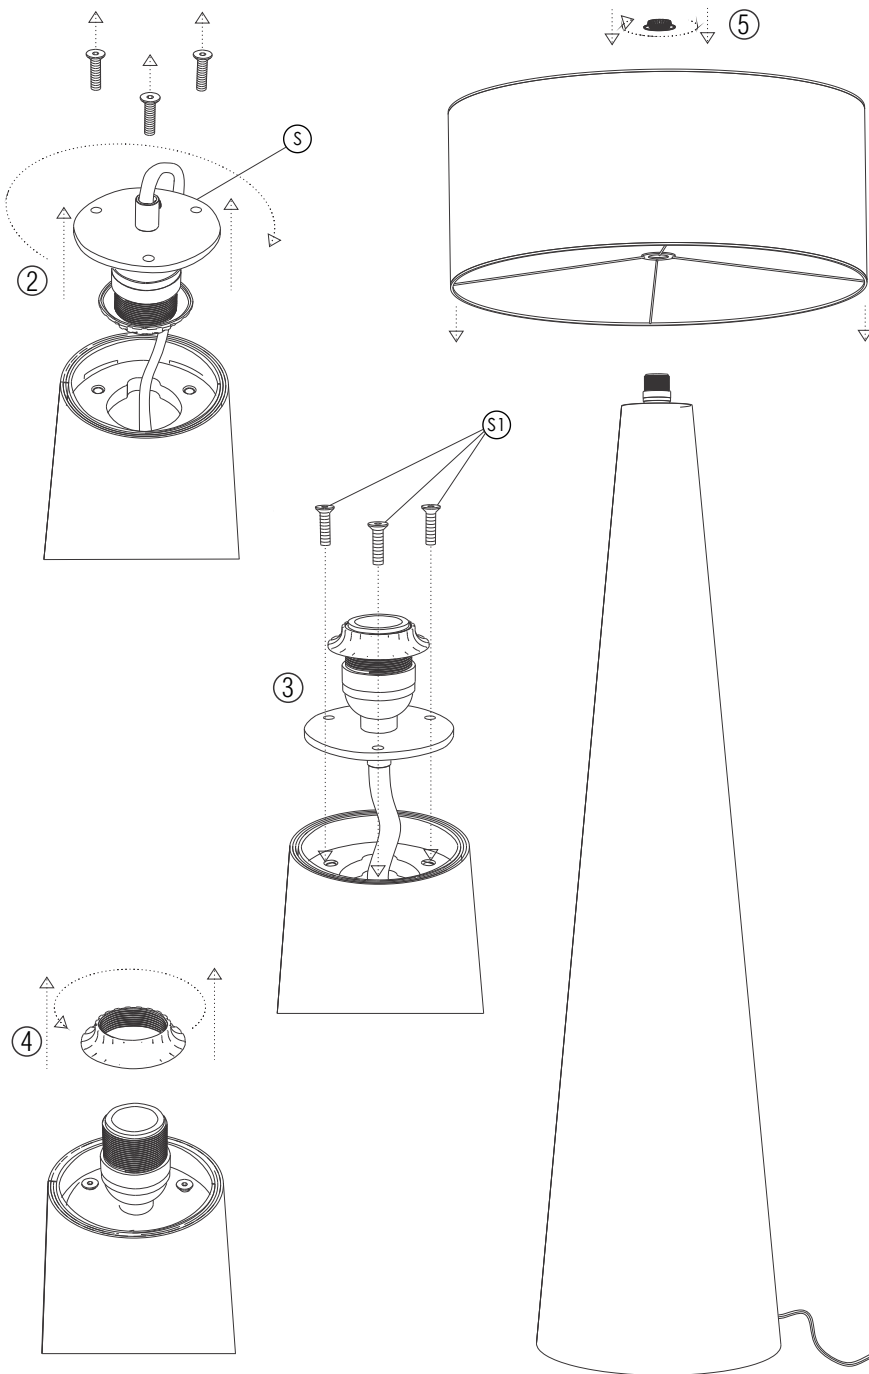

PROVIDED SCREWS



S1 (3)

ATTENTION!



FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
It's recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsibility of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.

WARNING!



Be sure electrical power is OFF before and during installation or maintenance.
The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

 
 
 
 
 
Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed.
All LEDs are included in your lamp. Never touch the LED surface with your bare hands as this may reduce the life of your LED.
Do not alter, relocate or remove any electrical component.

Line: Stecche
Family: Floor Lamps
Description: Stecche Accord Floor Lamp 363

Materials: natural wood veneer, MDF.

ASSEMBLING THE FIXTURE

Read carefully all the assembling instructions below before starting the installation process.

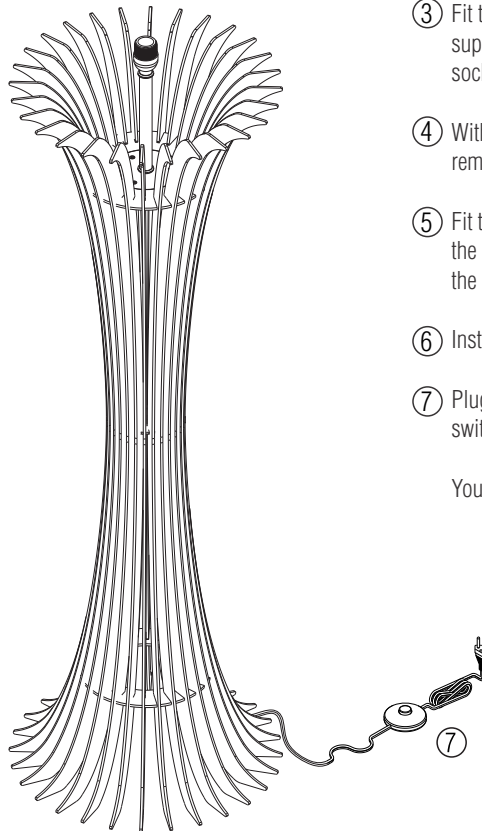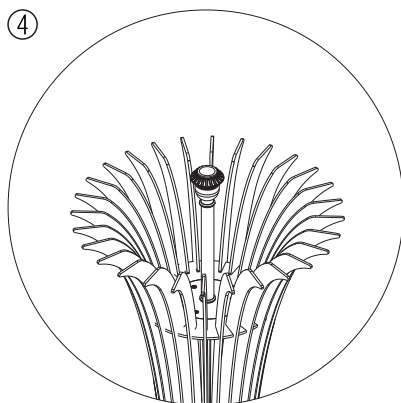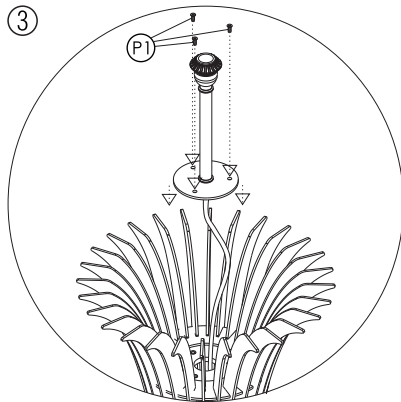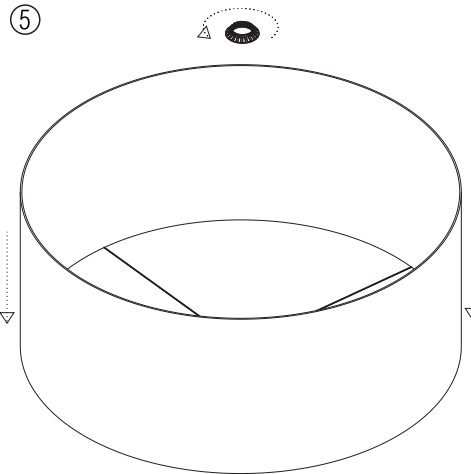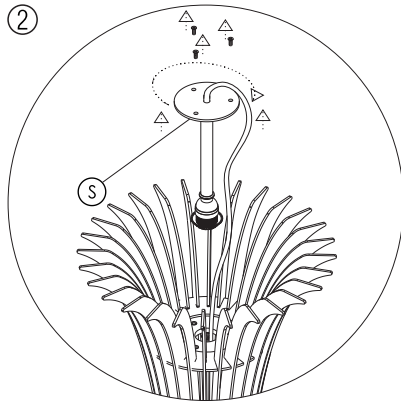

- ① Remove the protecting package from the pieces taking care to not harm any parts with cutting surfaces or objects. Lay the parts of the fixture on some horizontal surface in order to connect them, if needed use the protecting package to soften the surface and protect the parts from getting scratched or harmed.
- ② Remove the screws, rising and turning the socket's support (S).
- ③ Fit the socket's support aligning it with the holes on top of the superior base, next, fasten the provided screws (S1) until the socket's support is tight on the base.
- ④ With the socket's support fixed on the base of the fixture, remove the socket's ring.
- ⑤ Fit the metallic structure of the shade on the socket, fastening the socket's ring in the place again to finish the installation of the shade.
- ⑥ Install an UL listed E-26 LED bulb respecting the limit of 25W.
- ⑦ Plug the luminaire to an appropriate outlet and use the floor switch to turn the fixture ON/OFF.

Your fixture is ready to use.

PROVIDED SCREWS



S1 (3)

ATTENTION!



FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY.
It's recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsibility of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual.
The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation.
See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.