

dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

accidents, alterations of any kind, improper usage or improper installation. See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.



255LULN

/4

WARNING!

JUNCTION BOX

(NOT SUPPLIED)

CROSSBAR

CANOPY

GROUNE

Be sure electrical power is OFF before and during installation or maintenance. The luminaire must be installed by a qualified electrician, in accordance with all applicable local codes.

CONNECTORS

(NOT SUPPLIED)

BLACK(HOT)

WHITE(NEUTRAL)

METAL CANOPY

8

SCREW

 (Π)

ASSEMBLY INSTRUCTIONS

USA & CANADA

Ensure that the rated luminaire voltage requirements are compatible with the available mains supply in which it will be installed. All LEDS are included in your lamp. Never touch the LED surface with your bear hands as this may reduce the life of your LED. Do not alter, relocate or remove any electrical component.

> Color Temperature: Lamp dependent CRI: Lamp dependent Luminous Flux: Lamp dependent Total Power: Lamp dependent

Input Voltage: 110V - 277V Input Frequency:60 Hz Isolation: Class II

Material: Natural Wood Veneer, MDF and Acrylic Weight:

Height Adjustment Limit:160cm/63in

MAKING ELECTRICAL CONNECTIONS

- 6 Pass the power supply cable through the strain relief cone, threaded tube niple, canopy and crossbar.
- Adjust the lenght of power supply cable by tying a knot to secure it in place.
- 8 Connect the electrical supply wires to the junction box in accordance to all aplicable local codes, as shown in the diagram.

MOUNTING ON THE FIXTURE

- Attach the crossbar to the junction box using the supplied screws.
- (1) After electrical connections are made, place excess wire inside of the junction box.
- (1) Bring the canopy to the ceiling and secure it by screwing the strain relief cone with the threaded tube niple into the crossbar.

Turn ON electrical power.

Your luminaire is now ready for use.

DIMMER COMPATIBILITY

The LED driver included with this fixture is designed to operate with most standard dimmers. All power ratings and installation instructions from dimmer manufacturers' instruction sheets must be followed.



FAILURE TO COMPLY WITH THESE INSTRUCTIONS MAY CAUSE ACCIDENTS AND LOSS OF PRODUCT WARRANTY. Its recommended to read these instructions completely and carefully before proceeding.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

ACCORD Lighting guarantees coverage against manufacturing defects including electrical components and finishes, for a period of three years, under normal use, from the date of purchase. For warranty service, please contact your local dealer for further instructions. Proof of date of purchase will be required for validation of warranty service.

The responsability of the manufacturer regarding the product warranty is related to the correct observation of the instructions contained in this manual. The manufacturer is not responsible for any damage to the product caused by accidents, alterations of any kind, improper usage or improper installation. See the website for additional warranty details.

ACCORD Lighting reserves the right to change the dimensions and specifications contained in this manual without prior notice, in accordance with its policy of continuous product improvement. Please, contact the manufacturer if additional information is necessary. The illustrations in this manual are for guidance only and may vary in scale, dimensions and model details.